


PENETRATION MUST BE PROPERLY ANCHORED, GROUTED AND CAULKED VOID MAY BE FILLED WITH SOPRAMASTIC OR EQUAL


APPLY COLPHENE 3000 TIGHTLY OVER PIPE PENETRATION AND ONTO BASE COAT OF COLPHENE LIQUID MEMBRANE

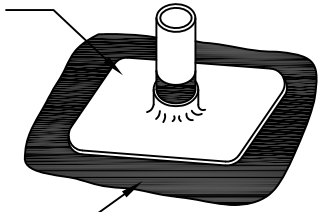

COLPHENE LIQUID MEMBRANE

NOTES:

1. DETAIL TO BE USED IN CONJUNCTION WITH SOPREMA GENERAL REQUIREMENTS, APPLICATION METHODS AND APPROVED DETAILS.
2. PENETRATIONS MUST BE FIRMLY SECURED AND PROPERLY PREPARED PRIOR TO THE INSTALLATION OF NEW MATERIALS. APPLY ELASTOCOL 600c PRIMER AS NEEDED.

		310 QUADRAL DRIVE WADSWORTH, OHIO 44281 (330) 334-0066	
TITLE			
BSW- VERTICAL PIPE PENETRATION FLASHING			
SCALE	DWN	CHK	APPROVAL DATE
NONE	TM	JP	02/14/11
DRAWING NUMBER			REV
BSW11			0

** USAGE OF THIS DRAWING IS GOVERNED BY THE TERMS OF SERVICE FOR SOPREMA DETAIL. PLEASE CONSULT THESE TERMS OF SERVICE PRIOR TO UTILIZING THIS DRAWING.