



APPLY SOPRA-FLASH UN TIGHTLY OVER PIPE PENETRATION AND ONTO BASE COAT OF COLPHENE H  
 REFERENCE DETAIL HRW-301

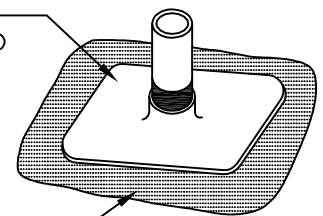

COLPHENE H  
 (NO VOIDS)

**NOTES:**

1. DETAIL TO BE USED IN CONJUNCTION WITH SOPREMA GENERAL REQUIREMENTS AND APPROVED DETAILS.
2. CLEAN ALL PENETRATIONS OF DIRT, RUST AND OIL. ROUGHEN SURFACE OF PIPE BEFORE APPLYING PRIMER. VERIFY PENETRATION IS PROPERLY SECURED TO DECK OR WALL TO AVOID MOVEMENT OF PIPE.
3. REFERENCE DETAIL HR-301 FOR SPECIFIC INSTALLATION GUIDELINES OF PIPE FLASHING MEMBRANE.
4. THIS DETAIL IS APPLICABLE FOR VERTICAL WALL PENETRATIONS (TYPICAL)

		310 QUADRAL DRIVE WADSWORTH, OHIO 44281 (330) 334-0066		
TITLE <b>VERTICAL OR HORIZONTAL PIPE PENETRATIONS</b>				
SCALE	NONE	DWN TM	CHK JP	APPROVAL DATE 11/23/09
DRAWING NUMBER			HRW-300	
				REV 0

**\*\* USAGE OF THIS DRAWING IS GOVERNED BY THE TERMS OF SERVICE FOR SOPREMA DETAIL. PLEASE CONSULT THESE TERMS OF SERVICE PRIOR TO UTILIZING THIS DRAWING.**