



STEP #1

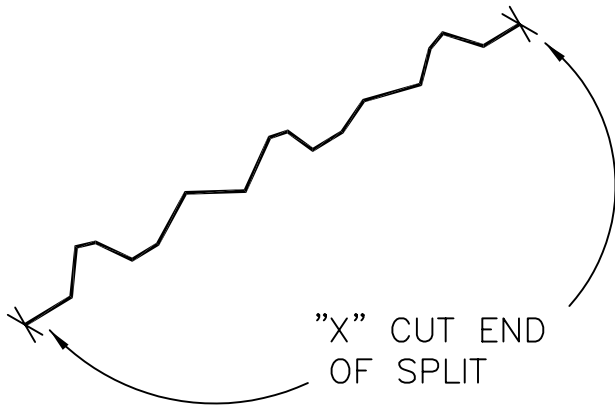


STEP #2

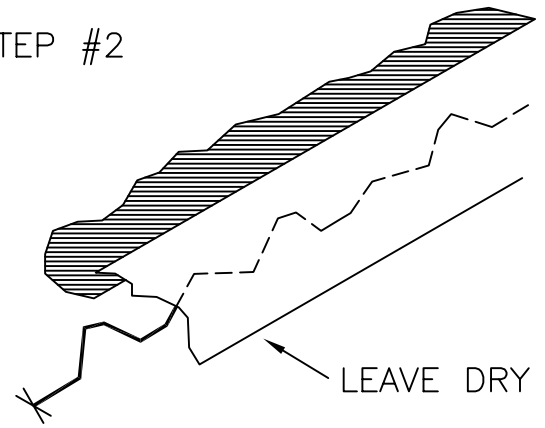


EMBED 6" (152mm) WIDE TYPE IV PLY SHEET OVER SPLIT WITH SOPREMA TROWEL GRADE ON 1 SIDE ONLY

STEP #3

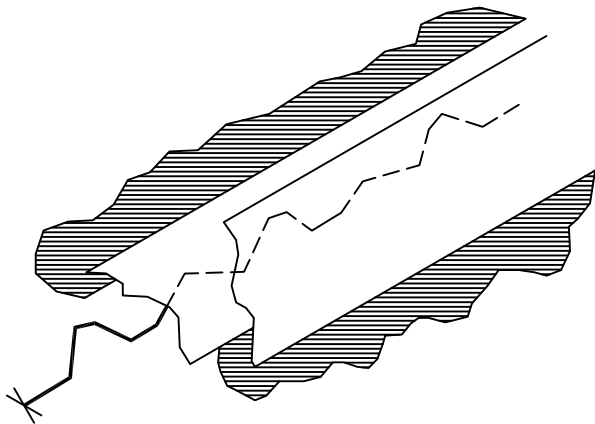

EMBED 6" (152mm) WIDE TYPE IV PLY SHEET OVER PREVIOUSLY INSTALLED PLY SHEET AS SHOWN


STEP #4

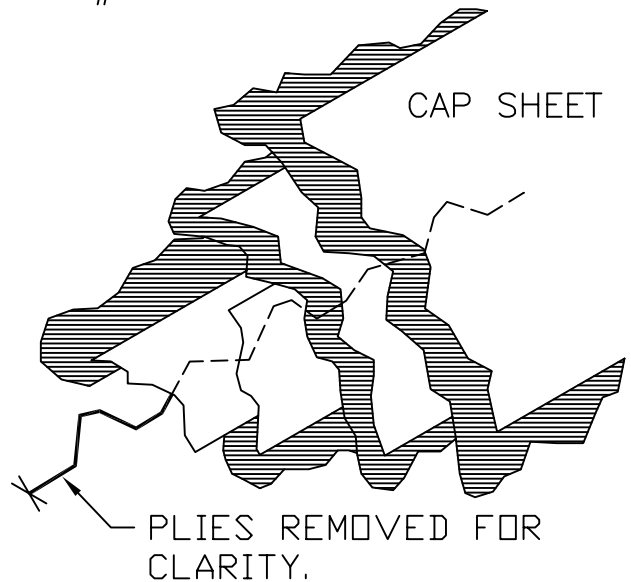

INSTALL 1 LAYER OF 12" (305mm) WIDE ELASTOPHENE 180 SANDED SHEET IN MASTIC AND 1 LAYER 18" (457mm) WIDE SOPRALENE 180 GR CAP SHEET IN SOPREMA TROWEL GRADE

NOTES:

1. DETAIL TO BE USE IN CONJUNCTION WITH SOPREMA GENERAL REQUIREMENTS, APPLICATION METHODS AND APPROVED DETAILS.
2. CONSTRUCT OTHER ROOF COMPONENTS ACCORDING TO PROJECT SPECIFICATIONS AND CURRENT RECOMMENDATIONS FROM FMRC, SMACNA AND NRCA.
3. SOPREMA FLASHING ADHESIVE, MASTIC, PRIMER (DEPENDING ON APPLICATION METHOD) REQUIRED WHERE INDICATED. SOPREMA SEALANT OR OWNER SPECIFIED SEALANT IS REQUIRED WHERE SEALANT IS INDICATED.

		310 QUADRAL DRIVE	
		WADSWORTH, OHIO 44281	
		(330) 334-0066	
TITLE			
COLD ADHESIVE REPAIR W/ MOVING SPLIT			
SCALE	DWN	CHK	APPROVAL DATE
NONE	DMT	PR	9/1/05
DRAWING NUMBER			REV
MISC-010			0