


# ALSAN SINGLE PLY RESTORATION

## MBSP SPRAYABLE MEMBRANE SYSTEM

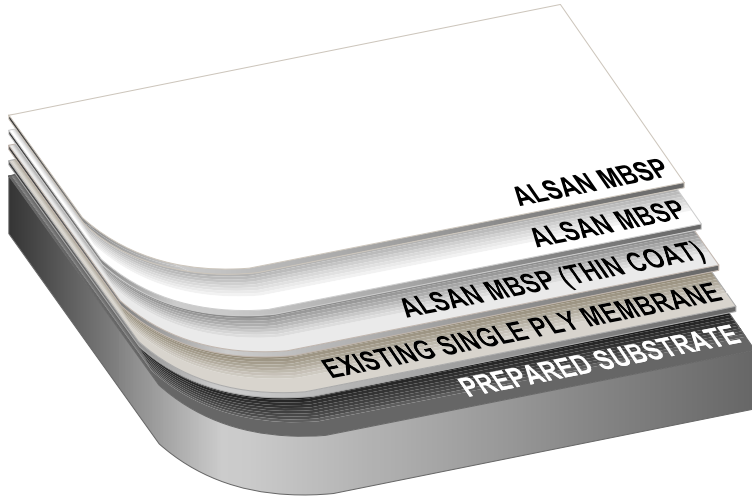

### PRODUCT DETAILS

#### ALSAN MBSP

Sprayable SEBS liquid waterproofing

#### ALSAN MBSP MASTIC

Mastic grade SEBS liquid waterproofing

Please refer to applicable product data sheets for additional information.

### SUBSTRATE PREPARATION

Refer to substrate preparation and priming schedule.

Generally:

Remove existing paint and finishes etc. by grinding.

Ensure that the prepared surface is clean, dry and free from dust, laitence, grease, oil and any other contaminants.

Acceptance of the substrate is the sole decision of the owner or appointed representative.

### PRIMING

Not applicable though proper cleaning with ALSAN MBSP CLEANER is recommended.

### FIELD AND FLASHING

Apply an initial "tack" layer of ALSAN MBSP GREY (0.5 gal/100 ft<sup>2</sup> min.) with a spray rig or lambswool roller. Spraying is the preferred method of application. If rolling, do not pour liquid and spread; dip roller into pail and roll out.

Can be walked upon/next coat applied after approx. 1 hour.

Apply an even layer of ALSAN MBSP GREY (1.25 gal/100 ft<sup>2</sup> min.) with a spray rig or lambswool roller.

Can be walked upon/next coat applied after approx. 1 hour.

Apply ALSAN MBSP WHITE (1.25 gal/100 ft<sup>2</sup> min.) with a spray rig or lambswool roller.

Can be walked upon after approx. 1 hour.

### TRAFFICABLE SURFACING

Not applicable.

### COMPLETION

Upon completion of new installation (including all associated work), institute appropriate procedures for surveillance and protection of finished work during remainder of construction period. Protect all areas where coating has recently been installed. Notify the Owner and the Manufacturer when finished. Coordinate final inspection by Manufacturer. Complete all repairs or requests promptly. Comply with all paperwork and payment requirements necessary to acquire the specified warranty.

SOPREMA