

PARKING SYSTEM

PRODUCTS

- ① **Alsan RS 276 Primer**
10 kg (2.5 gal) can
Requires 2 catalyst packets
Improves substrate adhesion
- ② **Alsan RS 230 Flash + Fleece**
12 kg (2.6 gal) can
Requires 3 catalyst packets¹
Flashing grade waterproofing
layer reinforced with polyester
fabric
- ③ **Alsan RS 233 Mortar + Quartz**
33 kg (5.3 gal) quantity
Requires 2 catalyst packets¹
Heavy duty trafficking surface
with embedded aggregate
- ④ **Alsan RS 288 Color Finish**
10 kg (2.6 gal) can
Requires 2 catalyst packets¹
Color finish

Alsan RS Fleece

165' length; available in widths
of 41", 21", 13", 10" and 4"


Alsan RS Catalyst

0.1 kg packets

Quartz Aggregate

50 lb sack

Available in "00", "0" & "1" sizes
with "00" being the smallest

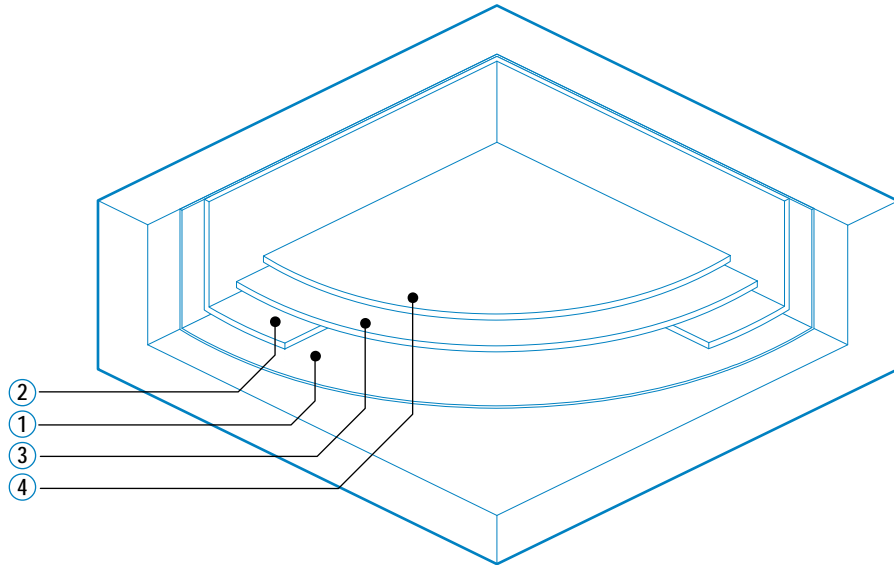

ALSAN RS 233-288 PARKING SYSTEM

Rapid curing, heavy duty vehicular traffic application over open and non-conditioned space

Surface preparation

Remove existing paint and finishes etc. by mechanical means.

Ensure that the prepared surface is clean, dry and free from dust, laitance, grease, oil and any other contaminants.

Concrete must be fully cured (28 days) with a minimum hardness of 24 MPa (3500 psi). Concrete surface must be prepared to obtain concrete surface profile (ICRI CSP) of 2, 3 or 4. To obtain such a profile, the use of special equipment such as shot blasting is recommended. Concrete substrate should have a maximum moisture content of 1.5 kg/100m²/24h (ASTM F1869) and internal content of 75% RH (relative humidity) (ASTM F2170).

Clean and prepare metal surfaces to near white metal in accordance with SSPC - SP3 (power tool clean) or as required by membrane manufacturer. Extend preparation a minimum of three (3) inches beyond the termination of the membrane flashing materials. Notch steel surfaces to provide a rust-stop. In addition to cleaning, all metal surfaces shall be abraded to provide a rough open surface. A wire brush finish is not acceptable.

Acceptance of the substrate is the sole decision of the owner or appointed representative.

1 Alsan RS Primer application

Using a slow-speed mechanical mixer, thoroughly mix the entire container of resin for two minutes prior to use. Catalyze only the amount of material that can be applied within 15-20 minutes. To activate the entire 10 kg (2.2 gal) can of Alsan RS Primer, add two packets¹ of Alsan RS Catalyst and stir for two minutes using mixer. Alsan RS Primer comes in two versions, Alsan RS 222 Primer is used for surfaces with asphaltic residue still present on the substrate; Alsan RS 276 Primer is used on cleaned wood and concrete surfaces.

2 Alsan RS 230 Flash and RS Fleece application

Using a slow-speed mechanical mixer, thoroughly mix the entire container of resin for two minutes prior to use. Catalyze only the amount of material that can be applied within 15-20 minutes. To activate the entire 12 kg (2.2 gal) can of Alsan RS 230 Flash, add three packets¹ of Alsan RS Catalyst and stir for two minutes using mixer. Apply Alsan RS 230 Flash to clean, dry and prepared substrate using Soprema approved rollers. The resin should be spread evenly onto the surface. Alsan RS Fleece is laid into wet Alsan RS 230 Flash product, and all wrinkles and air bubbles are rolled out of the reinforcement. Apply another layer of Alsan RS 230 Flash onto reinforcement in order to assure full saturation. Second layer of Alsan RS 230 Flash should be applied while the initial layer of Alsan RS 230 Flash is still wet in order to ensure proper curing. Alsan RS Fleece should be pre-cut prior to activation of Alsan RS 230 Flash. Fleece reinforcement should extend two inches out onto the field and a minimum of eight inches up. Refer to Alsan RS Fleece details for additional information.

¹ Number of 0.1 kg packets noted assumes warm temperatures; colder temperatures require additional catalyst. Refer to individual product data sheets for complete information on temperature ranges and catalyst quantities.

PARKING SYSTEM

3 Alsan RS 233 Self-Leveling Mortar and Quartz Aggregate application

Alsan RS 233 Self-Leveling Mortar is produced onsite by mixing one can of Alsan RS 210 and one sack of Alsan RS 223 Powder. Using a slow-speed mechanical mixer, thoroughly mix the entire container of 210 for two minutes prior to use. Pour contents of Alsan RS 210 into a large (six-gallon) bucket. Begin stirring with mechanical mixer and slowly add Alsan RS 223 Powder. Continue until contents of 223 Powder sack is empty; continue mixing for 3-5 minutes. Catalyze only the amount of material than can be placed within 10-15 minutes. To catalyze entire contents of mixture, add two packets¹ of Alsan RS Catalyst and stir for two minutes with mixer. Activated mixer is applied with a 1/4" notched trowel or with masonry float. Mark off area to be covered and continue spreading until smooth and even coat in designated area is achieved. Quartz aggregate is broadcast to rejection into wet Alsan RS 233 Mortar prior to curing in order to achieve a skid resistant surface. Allow product to fully cure a minimum of two hours prior to removal of excess aggregate.

4 Alsan RS 288 Color Finish application

Using a slow-speed mechanical mixer, thoroughly mix the entire container of resin for two minutes prior to use. Catalyze only the amount of material that can be applied within 15-20 minutes. To activate the entire 10 kg (2.3 gal) can of Alsan RS 288 Color Finish, add two packets¹ of Alsan RS Catalyst and stir for two minutes using mixer. Apply Alsan RS 288 Finish to clean, dry and prepared surface using Soprema approved rollers or flat squeegee. The resin should be spread evenly onto the surface.

ALSAN RS 288 FINISH STANDARD COLORS



pebble grey



stone grey



light grey



window grey



beige



terracotta

Custom colors available upon request. Please allow sufficient lead time.

technical data

Product	RS Primer	230 Flash	233 Mortar	288 Finish
Coverage rate per can ²	270 ft ²	42 ft ²	89 ft ²	150 ft ²
Product weight	10 kg	12 kg	33 kg	10 kg
Product volume	9.6 liters	9.7 liters	20 liters	10 liters
Coverage rate per 10 ft ²	0.3 liters	2.3 liters	2.0 liters	0.6 liters
Catalyst packets required ¹	2	3	2	2
Pot life	15 minutes	15 minutes	15 minutes	15 minutes
Rain proof after	30 minutes	30 minutes	30 minutes	30 minutes
Set time / next layer	30 minutes	60 minutes	60 minutes	60 minutes
Fully cured	2 hours	3 hours	3 hours	3 hours

¹ Number of 0.1 kg packets noted assumes warm temperatures; colder temperatures require additional catalyst. Refer to individual product data sheets for complete information on temperature ranges and catalyst quantities.

² All coverage rates are approximate and may vary due to the application technique and surface roughness.