


ALSAN RS 290 BALCONY SYSTEM

LIQUID APPLIED TRAFFICKING MEMBRANE

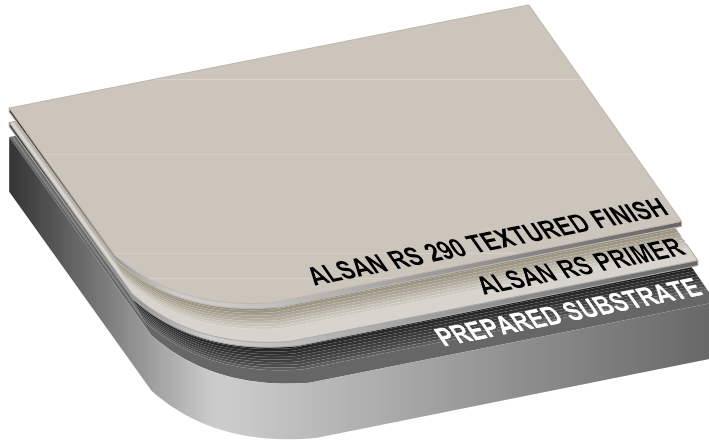

PRODUCT DETAILS

ALSAN RS PRIMER

Primer for improving substrate adhesion

ALSAN RS 290 TEXTURED FINISH

Trafficable surface finish

Please refer to applicable product data sheets for additional information.

SUBSTRATE PREPARATION

Refer to substrate preparation and priming schedule. Remove existing paint and finishes etc. by mechanical means.

Ensure that the prepared surface is clean, dry and free from dust, laitance, grease, oil and any other contaminants.

Concrete substrate should have a maximum moisture content of 1.5 kg/100m²/24h (ASTM F1869) and internal content of 75 % RH (ASTM F2170).

Acceptance of the substrate is the sole decision of the owner or appointed representative.

PRIMING

ALSAN RS 222 or 276 PRIMER:

Apply with a lambswool roller (0.4kg/m² min.)

Rainproof after approx. 25 minutes.

Can be walked upon/next coat applied after approx. 45 minutes.

FLASHING

FOR APPLICABLE FLASHING APPLICATIONS:

Apply an even layer of ALSAN RS 230 FLASH (2.0 kg/m² min.) with a lambswool roller or notched squeegee.

Roll ALSAN RS FLEECE reinforcement into the wet resin, pressing trapped air free using the lambswool roller, ensuring a minimum 50mm overlap between the reinforcement sheets.

Apply ALSAN RS 230 FLASH (1.0 kg/m² min.) wet on wet to ensure full saturation of the fleece.

Can be walked upon/next coat applied after approx. 45 minutes.

In Liquid applied applications, all flashing is installed first followed by the field application.

NON-SKID SURFACING FIELD APPLICATION

Apply ALSAN RS 290 TEXTURED FINISH (1.3 kg/m² min.) with a lambswool roller or notched trowel.

Can be walked upon after approx. 45 minutes.

COMPLETION

Upon completion of new installation (including all associated work), institute appropriate procedures for surveillance and protection of finished work during remainder of construction period. Protect all areas where coating has recently been installed. Notify the Owner and the Manufacturer when finished. Coordinate final inspection by Manufacturer. Complete all repairs or requests promptly. Comply with all paperwork and payment requirements necessary to acquire the specified warranty.

SOPREMA