


END OVERLAP DIMENSIONS FOR LIQUID APPLIED MEMBRANES ARE FOUR INCHES.

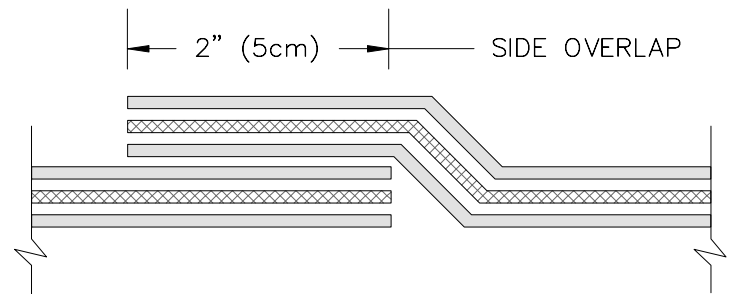

SIDE OVERLAP DIMENSIONS FOR LIQUID APPLIED MEMBRANES ARE TWO INCHES.

NOTES:

1. DETAIL TO BE USED IN CONJUNCTION WITH SOPREMA GENERAL REQUIREMENTS, APPLICATION METHODS AND APPROVED DETAILS.
2. A FULLY REINFORCED LIQUID MEMBRANE SYSTEM IS DEFINED AS AN ASSEMBLY CONSISTING OF TWO LIQUID RESIN APPLICATIONS & FABRIC REINFORCEMENT INSTALLED BETWEEN THE RESIN LAYERS.

		310 QUADRAL DRIVE WADSWORTH, OHIO 44281 (330) 334-0066						
		TITLE FULLY REINFORCED LIQUID MEMBRANE ASSEMBLY						
SCALE	NONE	DWN	PBF	CHK	BS	APPROVAL DATE	8/27/09	
DRAWING NUMBER	A-1						REV	0

** USAGE OF THIS DRAWING IS GOVERNED BY THE TERMS OF SERVICE FOR SOPREMA DETAIL. PLEASE CONSULT THESE TERMS OF SERVICE PRIOR TO UTILIZING THIS DRAWING.