


COLSTIX™ CAP
MEMBRANE PLY
ADHERED TO FIELD
BASE MEMBRANE PLY

SOPREMA APPROVED
SEAM SEALANT
APPLIED TO FINISHED
EDGES OF FIELD BASE
MEMBRANE PLY (TYP.)
SEE NOTE 2

COLSTIX™ COLVENT SA
OR COLVENT TG FIELD
BASE MEMBRANE PLY
PARTIALLY-ADHERED
TO ACCEPTABLE
SUBSTRATE


SOPREMA APPROVED SA
PRIMER APPLIED TO
ACCEPTABLE SUBSTRATE
AND TO TOPSIDE OF
BASE PLY PRIOR TO SA
CAP SHEET BEING
INSTALLED.

ACCEPTABLE
CONCRETE DECK
WITH SOPREMA
APPROVED PRIMER

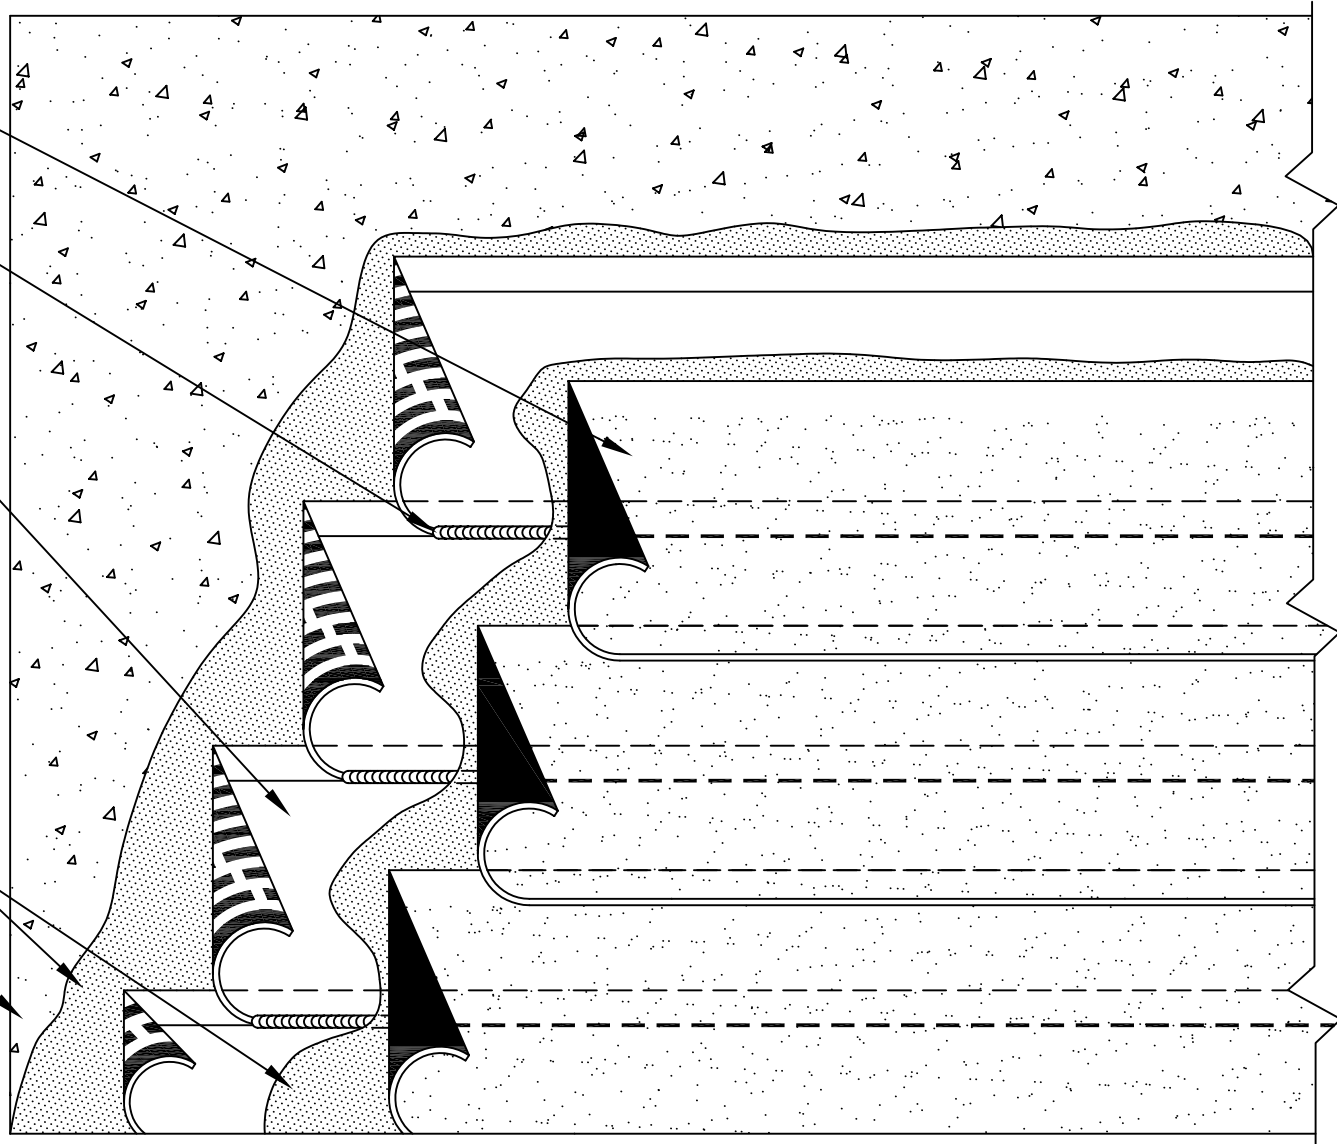

NOTES:

1. DETAIL TO BE USED IN CONJUNCTION WITH SOPREMA GENERAL REQUIREMENTS, COLSTIX PDS AND APPROVED DETAILS.
2. SEE DETAIL CXM-002 NOTES 2 & 3 FOR END LAP, (T) JOINTS AND FLASHING TIE-IN WATERTIGHT SEAL.
3. MEMBRANE INSTALLATION MUST NOT PREVENT VENTILATION OF EXISTING STRUCTURE.
4. WHEN PHASE CONSTRUCTING, BASE MEMBRANE PLY MUST BE CLEAN, DRY AND FREE OF ANY LATENT MOISTURE PRIOR TO PRIMER AND CAP SHEET APPLICATION.
5. COLSTIX™ SERIES FIELD CAP MEMBRANE PLY HAS A SELF-ADHESIVE UNDERSIDE WITH THE RELEASE FILM REMOVED PRIOR TO ADHERING THE CAP SHEET TO THE PRIMED COLSTIX™ SERIES FIELD BASE MEMBRANE PLY. THE FIELD BASE MEMBRANE PLY HAS EITHER A SELF-ADHESIVE OR PARTIAL SELF-ADHESIVE RIBBON UNDERSIDE WITH THE RELEASE FILM REMOVED PRIOR TO ADHERING THE BASE PLY TO AN ACCEPTABLE SUBSTRATE OR PRIMED SUBSTRATE. SEE CXM DETAILS.

		310 QUADRAL DRIVE	
		WADSWORTH, OHIO 44281	
		(330) 334-0066	
TITLE COLSTIX™ Colvent PA w/ Concrete			
SCALE	NONE	DWN DMT	CHK PR
DRAWING NUMBER		APPROVAL DATE	
CXM-012		10/15/04	
			REV 0

** USAGE OF THIS DRAWING IS GOVERNED BY THE TERMS OF SERVICE FOR SOPREMA DETAIL. PLEASE CONSULT THESE TERMS OF SERVICE PRIOR TO UTILIZING THIS DRAWING.